



user manual

BASEMN

Motion receiver



Index

Safety instructions 3

Introduction 5

General Description 5

Installation 6

Wiring 6

Mounting 7

Settings 8

Options 8

Programming 9

Manual programming of a transmitter 9

Programming several transmitters (optional) 10

Verification 11

LED indicators 11

Maintenance 12

Manual memory management 12

Removing a transmitter 12

Deleting all memory 13

Managing the memory with cloudAssistant (optional) 14

Trouble shooting 15

FAQ 15

Technical data 16

Electrical parameters 16

Physical parameters 16

Radio frequency parameters 16

Use of the system 20

EU Declaration of conformity 20




In compliance with the European Low Voltage Directive, we inform you of the following requirements:

- Disconnect power supply before any handling of the device.
- When the devices remain permanently connected, an easily accessible connecting device must be incorporated into the wiring.
- This system must only be installed by qualified professionals that have with automated garage doors and knowledge of the relevant European standards.
- The user instructions for this device must always be in the user's possession.
- The operating frequency of the receiver does not interfere in any way with the 868 MHz remote control systems.

Introduction

General Description

Miniaturized receiver for managing an automated door with Motion transmitters


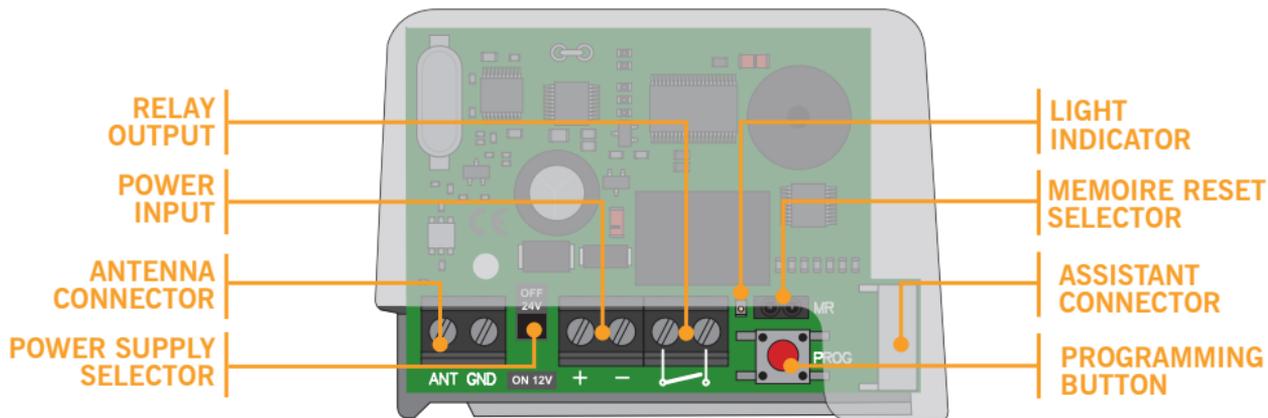


Its small size, its versatile power supply and its 500-code memory allow its use not only in industrial installations, but also in community and residential installations.

Installation



Wiring

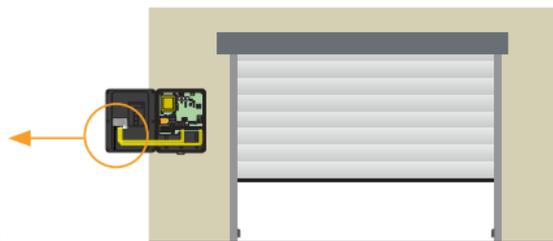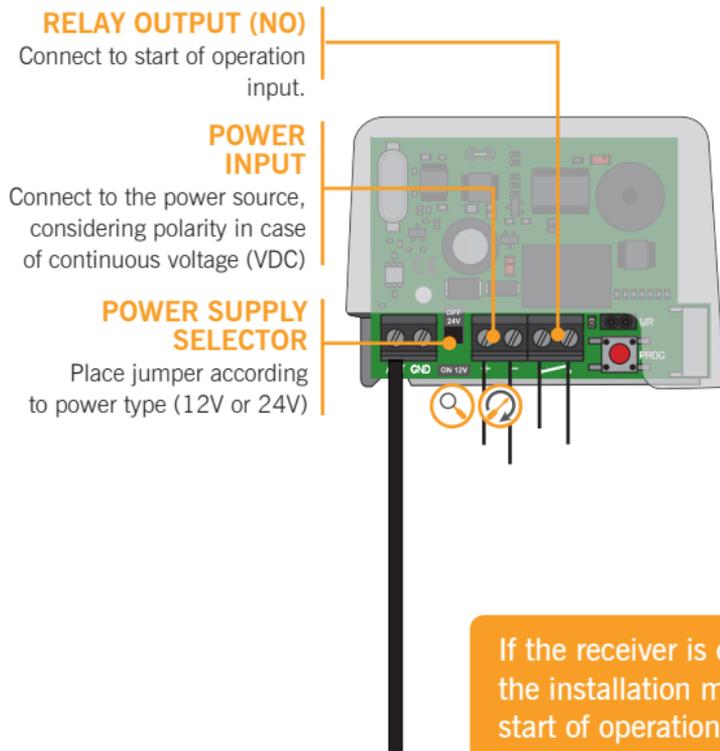

● Example of installation in a control box.


If the receiver is connected to a control panel, consult the installation manual to identify the power source and the start of operation input. 



Installation

Mounting

The receiver is easily installed inside a control panel

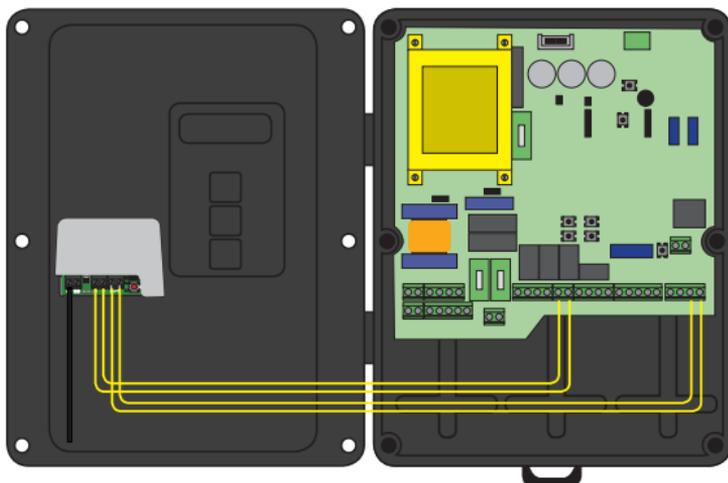

- Example of connection to the Versus panel.

It is protected from the other components by its plastic casing.



It is recommended to install the receiver away from the power source in the control panel and any existing radio frequency devices.




If using the supplied monopole antenna, place it straight to optimise reception.



Options

Parameter	Options
Relay output	Pulse (by default)/Bi-stable
Filtering by FREE system group	No (by default) / 0 / 1 / 2 / 3 / 4 / 5 / 6 / 7

If you wish to **modify the default options**, you must install the cloudAssistant software for Windows.

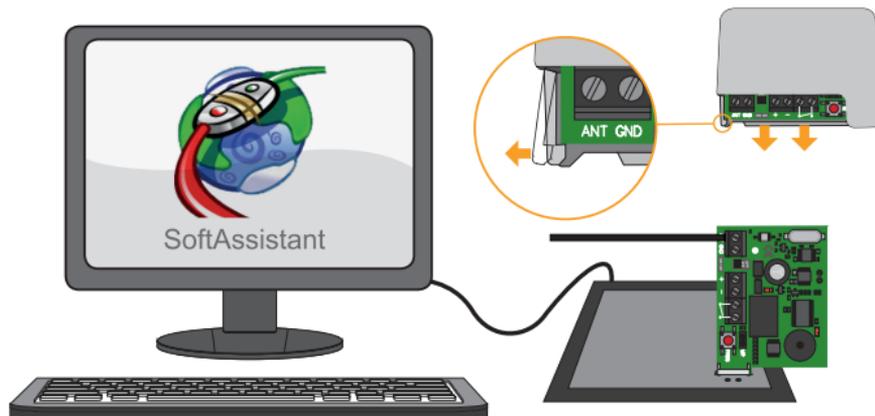


More info: www.jcm-tech.com/JCM/cloudassistant/




Programming

Manual programming of a transmitter

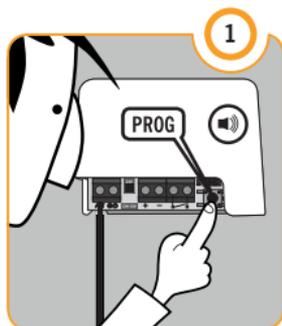


PROGRAMMING PUSH BUTTON

You will hear a beep for 1 second after pressing it.

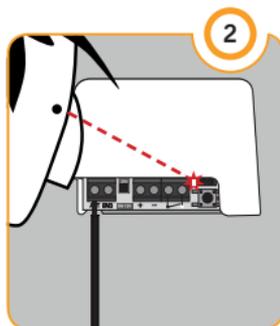


LED INDICATOR

It turns on when the programming mode is active.

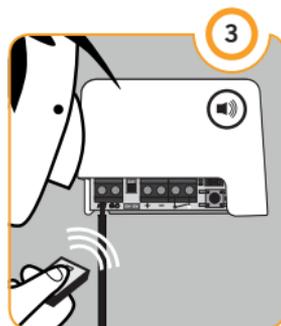

TRANSMITTER PUSH BUTTON

Each time that a transmitter channel is programmed, you will hear a beep for 0.5 seconds.

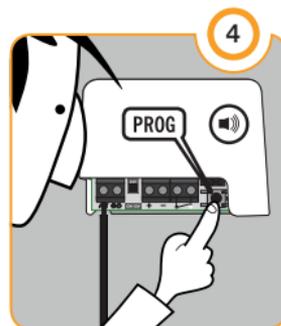

PROGRAMMING PUSH BUTTON

Press the button again to quit programming mode. You will hear a beep for 1 second.




If the memory is full, the receiver will keep 7 times for 0.5 second and quit programming mode.



If 10 seconds go by without programming, the receiver will quit programming mode and you will hear two beeps of 1 second.

Programming several transmitters (optional)

If you wish to **program several transmitters at the same time**, you must install the cloudAssistant software for Windows.

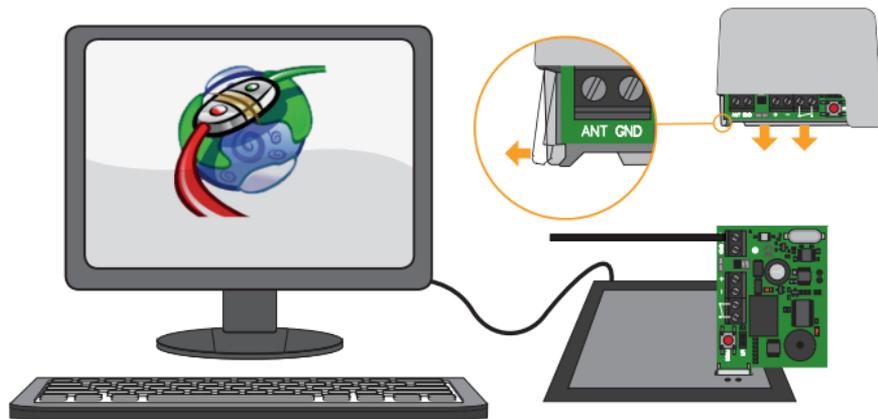

For more info: www.jcm-tech.com/JCM/cloudassistant/






Verification

LED indicators

Start-up	
Number of flashes	FREE group information
0	Disabled / Group 0
1	Group 1
2	Group 2
3	Group 3
4	Group 4
5	Group 5
6	Group 6
7	Group 7

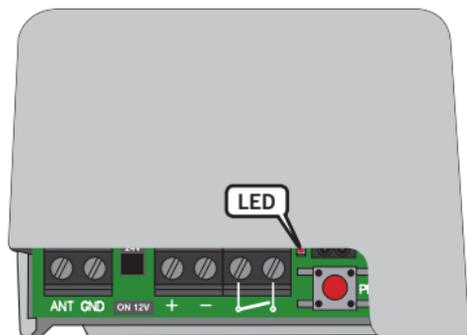

The flashes are short (0.5 sec). After that the indicator turns on again for 5 seconds more and turns off, indicating that the star-up has finished.




While the receiver is in stand-by, the indicator flashes shortly each 5 seconds.

Maintenance




Manual memory management

Removing a transmitter

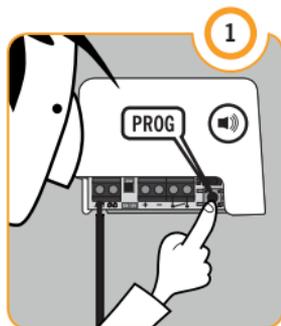

PROGRAMMING PUSH BUTTON

You will hear a beep for 1 second when you press it.

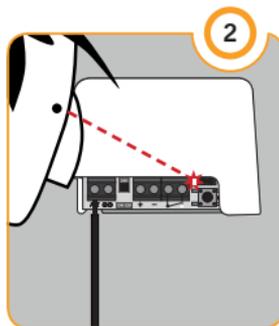


LED INDICATOR

This comes on when programming mode is active.



TRANSMITTER

Press the channel of the transmitter to be removed while shortcutting the memory reset jumper. You will hear a beep lasting 0.5 second.

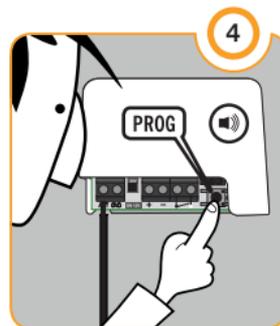

PROGRAMMING PUSH BUTTON

Press the button again to quit programming mode. You will hear a beep lasting 1 second.


The manual removal of a transmitter is similar to its programming. Check that you have obtained the desired result.



Maintenance


Manual memory management

Deleting all memory

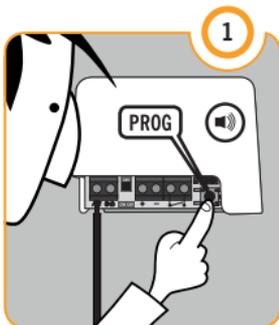


PROGRAMMING PUSH BUTTON

Keep it pressed down.

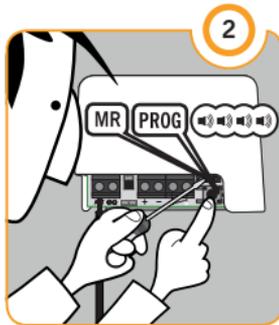


MEMORY RESET KEY

Without releasing the programming push button, shortcut the memory reset jumper. You will hear a burst of beeps.

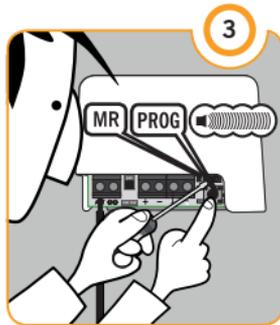

DELETION COMPLETED

Keep pressing and shortcutting until you hear a long beep indicating deletion completed.

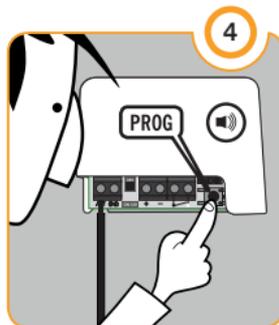

PROGRAMMING KEY

Press the push button again to quit programming mode. You will hear a beep for 1 second.


If 10 seconds go by without programming, the receiver will quit programming mode and you will hear two beeps of 1 second. 

Maintenance



Managing the memory with cloudAssistant (optional)

If you wish to manage the authorisation, replacement or cancellation of new transmitters, supervision or total deletion of memory, you must install the cloudAssistant software for Windows.

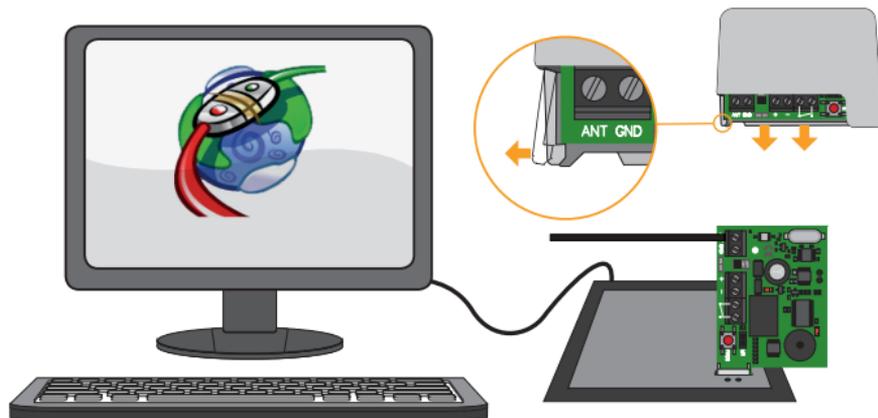

For more info: www.jcm-tech.com/JCM/cloudassistant/



Trouble shooting

FAQ

Q: How many codes can be stored in the BASE MINI memory?

A: 500 codes. The device has an internal memory of 500 codes which cannot be extended or reduced.

Q: How do you know that the receiver is powered?

A: When you see the LED indicator flashing every 5 seconds.

Q: I cannot find the memory card for connecting to the Assistant programming tool. Is it possible to manage with cloudAssistant? How are the codes saved?

A: Yes, that is possible. The codes are saved by connecting the electronic board in the slot of the Assistant tool using the white connector.

Q: Can the device be blocked so that no one can delete and/or program more commands?

A: Yes, by saving the memory with cloudAssistant and previously marking the "Prohibit programming via radio" and "Prohibit manual programming" options in the Application / Settings menu.

Q: How do you know that the device is blocked?

A: When you press the PROG button and the receiver does not transmit the beep indicating that it is entering programming mode.

Q: How many relay outputs does this receptor have?

A: It has one relay output

Q: Can proximity readers be connected to this receiver?

A: No, it can only be radio controlled.

Q: Can the Free system groups be managed with this receiver?

A: Yes, you need to configure the group manually or using the cloudAssistant in the Structure/Setting tab.

Technical data

Electrical parameters

Power supply	12/24Vdc/ac
Stand-by/operation consumption	<50 mA / 100 mA
Maximum power consumption	5W
Relay power	3A
Memory capacity	500 codes

Physical parameters

Operating temperature	-20°C ... +55°C
Size	60 x 44 x 18

Radio frequency parameters

Frequency	Motion 868,35 MHz
Coding	High security changing code
Radiated power	< 25mW

Use of the system

This device is designed for applications with an automated garage door. It is not guaranteed for the direct activation of devices other than those specified.

The manufacturer reserves the right to change the device specifications without warning.

EU Declaration of conformity

The manufacturer **JCM TECHNOLOGIES, SAU** declares that the product **BASE MN** complies with the relevant fundamental requirements of the RED Directive 2014/53/EU and of the RoHS Directive 2011/65/EU.

See website www.jcm-tech.com/en/declarations

JCM TECHNOLOGIES, SAU • C/ COSTA D'EN PARATGE, 6B - 08500 VIC (BARCELONA) SPAIN

UM_3200407_BASE-MN_EN_Rev03

