

## 1 Product instructions

The remote control MWD RC2 transmits the control commands to the motion detector via infrared signals to the FEIG motion detector. The remote control MWD RC2 must always be directed towards the FEIG motion detector.

### ATTENTION

#### Use the remote control only with FEIG motion detectors!

- Read the installation manual and the safety instructions.
- The manufacturer has carefully checked and inspected the hardware and software, but no warranty is given for a complete absence of errors.



Batteries contain toxic materials. It is illegal to dispose of them in the domestic waste. They must be collected together and disposed of in an environmentally sound fashion.

### 1.1 Technical Data

|                              |                         |
|------------------------------|-------------------------|
| <b>Standard operation</b>    | 2 x 1.5 V micro battery |
| <b>Operating temperature</b> | -10 °C... +45 °C        |
| <b>Range</b>                 | Approx. 10 m            |
| <b>Carrier frequency</b>     | 36 kHz                  |
| <b>Key number</b>            | 11 active keys          |

### 1.2 Description and function of the keys



|  |                            |
|--|----------------------------|
|  | ON/OFF key                 |
|  | LED                        |
|  | Information key (i button) |
|  | Fade-out of persons*       |
|  | Function key (F-buttons)   |
|  |                            |
|  | Volume up key              |
|  | Volume down key            |
|  | Number block               |

\*MWD BF only

Fig. 1: MWD RC2