

	INSTAL	I ATION —				
z		the back cover	from the uni	t		
		es(A,C) on the e supplied rubbe			one hole for the cable oles(A,C)	
m, Door and Output	> Thread th	ack cover firmly ne cable through	n the cable h		ad screws	
lt)	> Attach the	e unit to the bac	k cover			
input &		1 2 3 4	**************************************	1 2	0 2 2 2 2 2 2 2 2 2	
ts		5 6 7 8	Stenn O B	3 4 5 6 7 8	Obenin B	
r EM card,		9 0	Simm C	* .	2779 3789m	
ual Number				0	O C	
		A		В	1	
	Wiring					
	Wire Color			N	lotes	
	Basic Standa	DC +	12 10// DC	Power Input		
	Black	GND		ole of DC Pow	ver Innut	
	Blue	Relay NO			out (install diode provided)	
				-, -,	,	

rrange Relay NC Normany Cused Relay Output (install diod (ellow OPEN Request to Exit(REX) Input rass-Through Wiring (Wiegand Reader or Controller)


Freen Data 0 Wiegand Output (Pass-through) Data 1 Wiegand Output (Pass-through) Data 1


| Alarm Output | Negative contact for Alarm |
| Contact Input | Door/Gate Contact Input (Normally Closed)

-03-

	Sound and Light Indication		
	Operation Status	LED	Buzzer
rews and one hole for the cable	Stand by	Red light bright	_
e screw holes(A,C)	Enter into programming mode	Red light shines	One beep
th 4 flat head screws	In the programming mode	Orange light bright	One beep
le(B)	Operation error	_	Three beeps
	Exit from the Programming mode	Red light bright	One beep
	Open lock	Green light bright	One beep
	Alarm	Red light Shines quickly	Beeps
1 2 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Basic Configure Enter and Exit Program Mode		
9 0 30mm	Programming Step	Keystroke Combina	ition
O 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Enter Program Mode	* (Master Code) # (Factory default is 12	3456)
В	Exit Program Mode	*	
	Set Master Code		
Notes	Programming Step	Keystroke Combina	ation
	1 Enter Program Mode	+ (Master Code)#	

laster Code		
gramming Step	Keystroke Combination	Attention:
nter Program Mode	* (Master Code)#	Install a 1N4004 or equivalent diode is nee supply, or the keypad might be damaged.
odate Master Code	0 (New Master Code) # (Repeat New Master Code) # (Master code is any 6 digits)	Access Control Power Supply
tit Program Mode	*	NO Blue
he Working Mode :: The device has 3 working mod and Reader Mode, choose the m lalone Mode / Controller Mode)	es: Standalone Mode, Controller Mode, oode you use. (Factory default is	NC Orange COM Purple DC: Red PERSURION P
gramming Step	Keystroke Combination	D_IN⊕ Brown
inter Program Mode	* (Master Code)#	ALARM-
tandalone/ControllerMode	77#(Factory default)	DO (B) Green
Viegand Reader Mode	78#	D1 → Write GND → Black
xit	*	

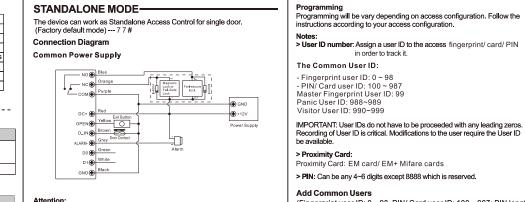

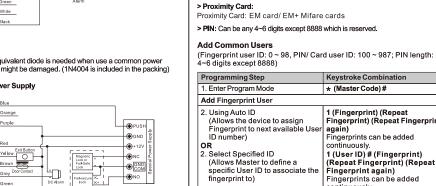

Fingerprint user ID: 0 ~ 98

Add Card User 1 (Read Card) / (Input 8/10/17 Digits next available User ID number) The cards can be added continu 2. Select Specific ID 1 (User ID) # (Read Card) 2. Add Card: Block Enrollment 1 (User ID) # (Card Quantity) # (Th (Allows Master to add up to 888 cards to the Reader in a single step First Card 8/10/17 Digits Number) #

Takes 2 minutes to program.	Card quantity = number of cards to be enrolled.
Add PIN User	
. Using Auto ID	1 (PIN) #
(Allows the device to assign PIN to next available User ID number) DR	The PINs can be added continuously
2. Select Specific ID (Allows manager to define a specific User ID to associate the PIN to)	1 (User ID) # (PIN) #
s. Exit	*
ips for PIN Security (Only valid fo	r 6 digits PIN):

or higher security we allow you to hide your correct PIN with other imbers up to a max of 10 digits Change PIN Users(PIN length: 4~6 digits except 8888)

xample PIN: 123434

ogramming Step	Keystroke Combination
Enter Program Mode	* (Master Code)#
Add Master Fingerprint	1 (99) # (Fingerprint) (Repeat Fingerprint) (Repeat Fingerprint again)
Exit	*

-07-

User ID number is 988, 989; PIN length: 4~6 digits except 888 Programming Step * (Master Code) # 2 (Input Fingerprint)/ (Read Card)/ (Input PIN) # 1 (User ID) # (Read Card / Input 17 Digits Card number)# The users can be deleted continuously. 1 (User ID) # (PIN) # Delete User - By ID number 2 (User ID)# 2. Delete User - By Card number 2 (input 8/10/17 Digits Card Number)# 2 (Master Code) # 2. Delete ALL Users

	Set Relay Configuration The relay configuration sets th	ne behaviour of the output relay on activation
	Programming Step	Keystroke Combination
\dashv	Enter Program Mode	*(Master Code)#
#	2. Pulse Mode	3 (1~99) # (factory default)
"	OR	The relay time is 1-99 seconds. (Default is 5 seconds)
25)	2 Toggle Mode	3.0#

Sets the relay to ON/OFF Toggle mode

For Multi user access mode, the interval time of reading can not exceed 5 seconds, or else, the device will exit to standby automatic Note: Below is done outside programming mode, users can undertake

> Card Access PIN Access Card + PIN Access 43#

-09-

4 3 (2~9) # (Only after 2~9 valid users, the door 4 4 # (factory default) Set Strike-out Alarm

Enter the Programming Mode

Change the Master Code

Add Fingerprint Use

Exit from the Programming Mode

How to release the doo

Add Card User

Add PIN User

Delete User

master code)

0 - New Code - # - Repeat the N

	It can be set to deny access for	e after 10 failed entry attempts (Factory is OFF) 10 minutes after engaging or disengage only :/ card/ PIN or Master code/ fingerprint/ card.
	Programming Step	Keystroke Combination
	Enter Program Mode	* (Master Code)#
	2. Strike-Out OFF OR	6 0 # (factory default)
ng	2. Strike-Out ON	61# Access will be denied for 10 minutes
	OR	(Exit button is still workable)
New	2. Strike-Out ON (Alarm)	62#
	Set Alarm Time	5 (0 ~ 3) # (factory default is 1 minute) Enter Master Code # or Master Fingerprint Card or valid user fingerprint / card / PIN to silence
rint-	3. Exit	*
min.		

(code: 6 digits)	
1 - Read Card -# (can add cards continuously)	3. Exit
1-Fingerprint- Repeat Fingerprint- Repeat Fingerprint Again-#	
1 - PIN -# (The PIN is any 4~6 digits except 8888 which is reserved)	Set Door Open Detection Door Open Too Long (DOTL) De When use with an optional magnet
2-Fingerprint-# 2-Read Card-# 2-PIN-#	lock, if the door is opened normally buzzer will beep automatically to re be stopped by closing the door, no continue to been the same time will

000	Door Open 100 Long (DO1L) Detection
	When use with an optional magnetic contact or built-in magnetic contact of the
	lock, if the door is opened normally, but not closed after 1 minute, the inside
	buzzer will beep automatically to remind people to close the door. The beep can
	be stopped by closing the door, master users or valid users, or else, it will
\dashv	continue to beep the same time with the alarm time set.
_	Door Forced Open Detection
	When use with an optional magnetic contact or built-in magnetic contact of the
-	lock, if the door is opened by force, the inside buzzer and external alarm (if there
	is) will both operate, they can be stopped by master users or valid users, or else
	it will continue to sound the same time with the alarm time set.

-10-

Programming Step	Keystroke Combination
Enter Program Mode	* (Master Code)#
2. Disable Door Open Detection OR	6 3 # (factory default)
2. Enable Door Open Detection	64#
Set Alarm Time	5 (0 ~ 3) # (factory default is 1 minute)
3. Exit	*

Wall Anchors

0=0

-02-

O B

Self Tapping Screws: Ф4*25mm

Screw Driver

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code)#
2. Disable Sound	70#
Enable Sound OR	7 1 # (factory default)
2. LED Always OFF	72#
LED Always ON	7 3 # (factory default)
OR	
Keypad Backlit Always OFF	74#
Keypad Backlit Always ON	75#
Keypad Backlit Automatic OFF	7 6 # (factory default)
	Automatic OFF after 20 seconds, it wil
	go ON by pressing any key (this key
	isn't taken into consideration)
3. Exit	*

	isn't taken into consideration)
3. Exit	*
Master Fingerprint/ Card Usag	je
Using Master Fingerprint/ Card	to add and delete users
Add Fingerprint/ Card/ PIN Users	Input (Master Fingerprint / Card) Input (Fingerprint three times) or (Card) or (PIN #) Repeat step 2 for additional users Input (Master Fingerprint / Card) again

erprint/ Card/ PIN Users	Input (Master Fingerprint/ Card Twice within 5s) Input (Fingerprint) or (Card) or (PIN #) Repeat step 2 for additional users Input (Master Fingerprint/ Card) again	

Common Connection for Relay Output

Normally Closed Relay Output (Install diode provided)


Users Operation & Reset to Factory Default > Open the door: Read valid user fingerprint or user card or input valid user PIN # > Remove Alarm: Enter Master Code # or Master Fingerprint/ Card or

> To reset to factory default & Add Master Card: Power off, press the Exit Button, hold it and power on, there will be two beeps, then release the exil button, the LED light turns into yellow, then read any 125KHz EM card/ 3.56MHz Mifare card, the LED will turn into red, means reset to factory defau successfully. Of the card reading, it is the Master Card.

valid user fingerprint / card / PIN

 $\ensuremath{\mathfrak{D}}$ If no Master Card added, must press the Exit Button for at least $5\,\text{seconds}$ before release (this will make the previous registered Master Card invalid) 2 Reset to factory default, the user's information is still retained.

CONTROLLER MODE ___ The device can work as Controller, connected with the external Wiegand reader. (Factory default mode) -- 7 7 #

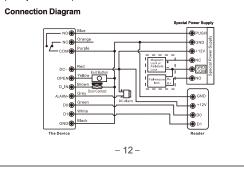

power supply, or the reader might be damaged. (1N4004 is included in the

-04-

Set Wiegand Input Formats Please set the Wiegand input formats according to the Wiegand output format

he external Reader.	mate according to the Mogana carpationnat
Programming Step	Keystroke Combination
. Enter Program Mode	* (Master Code) #
2. Wiegand Input Bit	For EM Card: 8 (26~44) # (factory default is 26bits) For Mifare Card: 8 0 (26~44, 56, 58) # (factory default is 34bits)
B. Disable Parity Bit Enable Parity Bit	8 0 # 8 1 # (factory default)
. Exit	*

Note: For connecting Wiegand readers with 32, 40, 56 bits output, need disable parity bits.

> Basic Programming is the same as Standalone Mode > There are some exceptions for your attention:

If EM/Mifare card reader: users can be added/deleted on either the device or external reader. - If HID card reader : users can only be added/deleted on external

The device Connected with Fingerprint Reader

Connect SF1 as the fingerprint reader to the device Step 1: Add the Fingerprint (A) on SF1 (Please refer to SF1 manual) Step 2: Add the same Fingerprint(A) on the device: Enter Program Mode: * (Master Code)#

1 (Press Fingerprint A once on SF1) # (ID auto allocated 1 (User ID) # (Press Fingerprint A on SF1) # (Select specific ID) 3 Exit: *

- 13 -

The device Connected with Keypad Reade The keypad reader can be 4 Bits, 8 Bits (ASCII), or 10 Bits output format.

noose the below operation according to the Filst output format of your reader.			inpu
Programming Step	Keystroke Combination	l	Pi
Enter Program Mode	* (Master Code) #	H	1.
2. PIN input bits	8 (4 or 8 or 10) # (factory default is 4 bits)	li	2.
3. Exit	*	П	l
emarks: 4 means 4 bits, 8 means 8 bits, 10 means 10 digits virtual number.			l
Add PIN Users:			PI
To add DIN years ofter enter into programming made on the device			_


IN(s) can be input/ added on either the device or the external > Delete PIN Users: the same way as add users.

WIEGAND READER MODE -

- Brown wire: Green LED light control

Yellow wire: Buzzer control

The device can work as Standard Wiegand Reader, connected to the third part Controller --- 7 8 # Connection Diagram

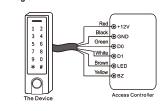

When set into Wiegand Reader mode, nearly all settings in Controller Mode will become invalid, and Brown & Yellow wires will be redefined as below:

If you need to connect Brown/Yellow wires: When the input voltage for LED is low, the LED will turn into Green; and when the input voltage for Buzzer is low, it will sound. - 14 -

Set Wiegand Output Formats Please set the Wiegand output formats of Reader according to the Wiegand

Programming Step	Keystroke Combination
Enter Program Mode	* (Master Code)#
2. Wiegand output bits	For EM Card: 8 (26~ 44) # (factory default is 26bits)
	For Mifare Card: 8 0 (26~44, 56, 58) # (factory default is 34bits)
PIN output bits	8 (4 or 8 or 10) # (factory default is 4 bits)
3. Disable Parity Bit	80#
Enable Parity Bit	8 1 # (factory default)
4. Exit	

-06-

Note: For connecting Wiegand controller with 32, 40, 56 bits input, need disable parity bits.

ADVANCED APPLICATION — Collection Card Mode


After this mode is turned on, all cards can open the lock. At the same time, he card is added to the device.

rogramming Step	Keystroke Combination
0 0 1	•
Enter Program Mode	* (Master Code)#
Collection Card Mode OFF	92# (factory default)
R	
Collection Card Mode ON	93#
. Exit	*

Jser Information Transfer (Valid for Card / PIN Users) The device supports the User Information Transfer function, and the enrolled user (cards, PINs) can be transferred from one (let's name it Master Unit) to

- 15 -

Connection Diagram:

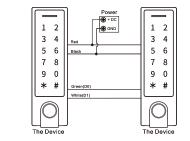

> The Master units and Accept units must be same series devices. The Master Code of the Master Unit and the Accept Unit must be set to the same

 Program the transfer operation on Master Unit only. If the Accept Unit is already with the users enrolled, it will be covered after > For full 900 users enrolled, the transfer takes about 30 seconds.

Cat Tuamafaurimu au Maatau I luit.

Set Transferring on Master Unit:		
Programming Step	Keystroke Combination	
Enter the programming mode	* (Master Code)#	
2. Set transferring	98#	
Within 30 seconds, Green LED shines, after one beep, the LED will turn into Red, which means the users' information has been transferred successfully.		
3. Exit	*	

- 16 -

 Enable Interlock
 Exit If enable interlock, when and only door 2 is closed, the user can read the valid fingerprint/card or input PIN on Reader A, door 1 will open; then when and onl door 1 closed, read valid fingerprint/card or input PIN on Reader B, door 2 will

Add Panic Users (Valid for Card/ PIN Users)

Add Visitor Users (Valid for Card/ PIN Users)

2. Add PIN

become invalid automatically.

Programming Step

(8888) to cards when adding)

higher level security is required.

Connection Diagram:

Programming Step

1. Enter Program Mode

2. Add Card

Change PIN

* (Master Code)#

* (Master Code) #

Change PIN of Card + PIN access mode (There will auto allocate PIN (Repeat New PIN) # (Repeat New PIN) #

-08-

The device supports the Interlock Function. It is of two Devices for two

doors, and mainly used for banks, prisons, and other places where a

Let's name the two Devices as "A "and "B" for two doors "1"

Step 2: Set both of the two Devices (A and B) to Interlock function

nroll the users on Device A then transfer the users' information to

90# (factory default)

* (User ID) # (Old PIN) # (New PIN) # (Repeat New PIN) #

(User ID number is 990–999; PIN length: 4~6 digits except 8888)
There are 10 groups Visitor PIN/card available, the users can be specified up to 10 times of usage, after a certain number of times, i.e. 5 times, the PIN/card 1 (User ID) # (0~9) # (Read Card) 1 (User ID) # (0~9) # (PIN) # 0~9 means times of usage, 0=10 times

Set Access Mode

Outdoor FingerKey & Reader

