

CONTENTS

INTRODUCTION

1

INSTALLATION

3

STANDALONE MODE

5

CONTROLLER MODE

11

WIEGAND READER MODE

13

ADVANCED APPLICATION

15

| Simplified Instruction | |
|--------------------------------|---|
| Function Description | Operation |
| Enter the Programming Mode | * - 123456 - # then you can do the programming (123456 is the factory default master code) |
| Change the Master Code | 0 - New Code - # - Repeat the New Code - # (code: 6 digits) |
| Add Card User | 1 - Read Card - # (can add Cards continuously) |
| Add PIN User | 1 - PIN - # |
| Delete User | 2 - Read Card - # for Card User 2 - PIN - # for PIN User |
| Exit from the Programming Mode | * |
| How to release the door | |
| Card User | Read Card |
| PIN User | Input PIN # |

INTRODUCTION

The XK Series Device is a single door multifunction standalone access controller or a Wiegand output reader. It uses Atmel MCU assuring stable performance. The operation is very user-friendly, and low-power circuit makes it long service life.

The XK Series Device supports 1,000 users (998 common users + 2 panic users), all user data can be transferred from one to another. It supports multi access modes in either card access, PIN access, Card + PIN access, or multi cards/PINs access. It has extra features including block enrollment, interlocked, Wiegand 26-37 bits interface...etc.

Features


- > Bluetooth Module(Optional), to connect mobile for opening door
- > Fashion design, all-metal key button
- > Metal Case, Anti-vandal
- > Waterproof, conforms to IP66
- > One relay, keyboard programmer
- > 1,000 users (998 common users + 2 panic users)
- > PIN length: 4-6 digits
- > Card type:
 - EM version: 125KHz EM card
 - HID & EM version: 125KHz HID & EM cards
- > Wiegand 26-37 bits input & output
- > Can be used as Wiegand reader with LED & buzzer output
- > Card block enrollment
- > Tri-colour LED status display
- > Integrated alarm & buzzer output
- > Pulse mode, Toggle mode
- > User data can be transferred
- > 2 devices can be interlocked for 2 doors
- > Built in light dependent resistor (LDR) for anti tamper
- > Backlit keypad
- > Low temperature resistance(-40 C)
- > Voltage: 12-28V AC/DC

Specifications

| | |
|--------------------------|--------------|
| User Capacity | 1000 |
| Common User | 998 |
| Panic User | 2 |
| Operating Voltage | 12-28V AC/DC |
| Idle Current | < 35mA |


| | |
|---|---|
| Proximity Card Reader Radio Technology Read Range | EM or HID & EM 125KHz Proximity Card 2-6 cm |
| Wiring Connections | Relay Output, Exit Button, Alarm, Door Contact, Wiegand Input, Wiegand Output |
| Relay Adjustable Relay Output Time Lock Output Load | One (NO, NC, Common) 0-99 Seconds (5 seconds default) 2 Amp Maximum |
| Wiegand Interface | Wiegand 26-37 bits (Factory Default: wiegand 26bits, 4 bits) 26-37 bits 4 bits, 8 bits(ASCII), 10 digits Virtual Number |
| Environment Operating Temperature Operating Humidity | Meets IP66 -40 C ~ 60 C (-40 F ~ 140 F) 0%RH-98%RH |
| Physical Colour Dimensions Unit Weight Shipping Weight | Zinc-Alloy Silver L114.5 x W75 x D22mm(Wide) L134 x W55.5 x D21mm(Slim) 360g(Wide)/340g(Slim) 440g(Wide)/420g(Slim) |

Carton Inventory

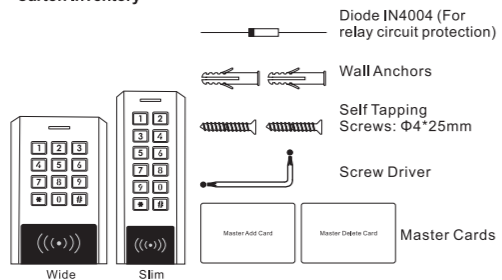

INSTALLATION

- > Remove the back cover from the unit
- > Drill 2 holes(A,C) on the wall for the screws and one hole for the cable
- > Knock the supplied rubber bumps to the screw holes(A,C)
- > Fix the back cover firmly on the wall with 4 flat head screws
- > Thread the cable through the cable hole(B)
- > Attach the unit to the back cover

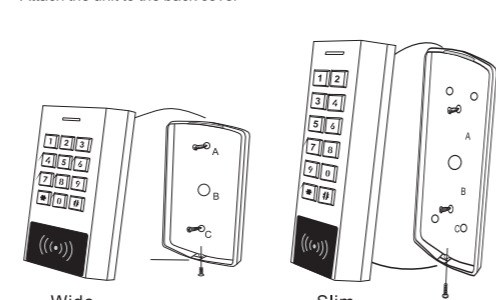

Wiring

| Wire Color | Function | Notes |
|------------|--------------|---|
| Red | AC/DC | 12-28V AC/DC Regulated Power Input |
| Black | AC/DC | 12-28V AC/DC Regulated Power Input |
| Pink | GND | Negative Pole |
| Blue | Relay NO | Normally Open Relay Output (install diode provided) |
| Purple | Relay Common | Common Connection for Relay Output |

| | | |
|--|---------------|---|
| Orange | Relay NC | Normally Closed Relay Output (install diode provided) |
| Yellow | OPEN | Request to Exit(REX) Input |
| Pass-Through Wiring (Wiegand Reader or Controller) | | |
| Green | Data 0 | Wiegand Input/Output Data 0 |
| White | Data 1 | Wiegand Input/Output Data 1 |
| Advanced Input and Output Features | | |
| Grey | Alarm Output | Negative contact for Alarm |
| Brown | Contact Input | Door/Gate Contact Input (Normally Closed) |

Sound and Light Indication

| Operation Status | LED | Buzzer |
|--------------------------------|--------------------------|-------------|
| Stand by | Red light bright | — |
| Enter into programming mode | Red light shines | One beep |
| In the programming mode | Orange light bright | One beep |
| Operation error | — | Three beeps |
| Exit from the Programming mode | Red light bright | One beep |
| Open lock | Green light bright | One beep |
| Alarm | Red light Shines quickly | Beeps |

Basic Configure

Enter and Exit Program mode

| Programming Step | Keystroke Combination |
|--------------------|--|
| Enter Program Mode | * (Master Code) # (Factory default is 123456) |
| Exit Program Mode | * |

Set Master Code

| Programming Step | Keystroke Combination |
|-----------------------|---|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Update Master Code | 0 (New Master Code) # (Repeat New Master Code) # (Master code is any 6 digits) |
| 3. Exit Program Mode | * |

Set the Working Mode

Notes: the XK Series Device has 3 working modes: Standalone Mode, Controller Mode, Wiegand Reader Mode, choose the mode you use. (Factory default is Standalone Mode / Controller Mode)


| Programming Step | Keystroke Combination |
|----------------------------------|-------------------------|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Standalone/Controller Mode OR | 7 2 # (Factory default) |
| 2. Wiegand Reader Mode | 7 3 # |
| 3. Exit | * |

STANDALONE MODE

The XK Series Device can be worked as Standalone Reader for single door. (Factory default mode)---7 2 #


Connection Diagram

Common Power Supply

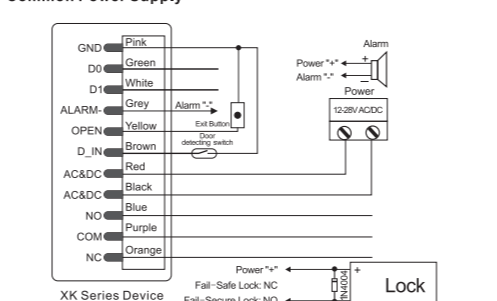

Attention: Install a 1N4004 or equivalent diode is needed when use a common power supply, or the keypad might be damaged. (1N4004 is included in the packing)

Access Control Power Supply:

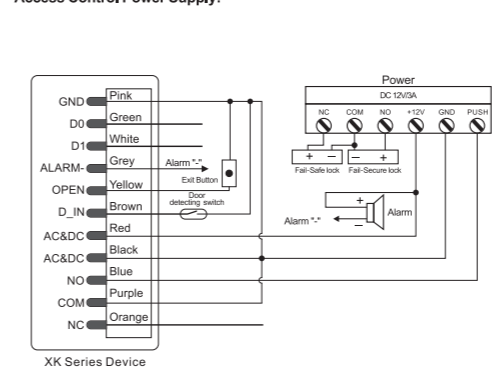

Programming

Programming will vary depending on access configuration. Follow the instructions according to your access configuration.

Notes:

- > **User ID number:** Assign a user ID to the access card / PIN in order to track it. The common user ID number can be any number from 0-997, the panic user ID is from 998-999. IMPORTANT: User IDs do not have to be proceeded with any leading zeros. Recording of User ID is critical. Modifications to the user require the User ID be available.
- > **Proximity Card :** EM version: 125 KHz industry standard 26bits EM card
HID & EM version: 125 KHz industry standard 26bits HID & EM cards
> **PIN:** Can be any 4-6 digits except 8888 which is reserved

Add Common Users

| Programming Step | Keystroke Combination |
|---|--|
| 1. Enter Program Mode | * (Master Code) # |
| Add Card User | |
| 2. Add Card: Using Auto ID (Allows the XK Series Device to assign Card to next available User ID number) | 1 (Read Card) # The cards can be added continuously. |
| OR | |
| 2. Add Card: Select Specific ID (Allows Master to define a specific User ID to associate the card to) | 1 (User ID) # (Read Card) # (User ID is any number from 0-997) |
| OR | |
| 2. Add Card: by Card Number | 1 (Input 8/10 digits Card number) # |
| OR | |
| 2. Add Card: Block Enrollment (Allows Master to add up to 998 cards to the Reader in a single step) Takes 2 minutes to program. | 1 (User ID) # (Card quantity) # # (The first card number) # Cards' number must be consecutive; Card quantity = number of cards to be enrolled. |

Add PIN User

| Programming Step | Keystroke Combination |
|-----------------------|---|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Add Card: | 1 (User ID) # (Read Card / Input 8/10 digits Card number) # |
| OR | |
| 2. Add PIN: | 1 (User ID) # (PIN) # (User ID is any number from 998-999) |
| 3. Exit | * |

Add Panic Users

| Programming Step | Keystroke Combination |
|-----------------------|---|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Add Card: | 1 (User ID) # (Read Card / Input 8/10 digits Card number) # |
| OR | |
| 2. Add PIN: | 1 (User ID) # (PIN) # (User ID is any number from 998-999) |
| 3. Exit | * |

Change PIN Users

| Programming Step | Keystroke Combination |
|---|--|
| 1. Change PIN: By Card (There will auto allocate PIN (8888) to cards when adding) | * (Read Card) (Old PIN) # (New PIN) # (Repeat New PIN) # |
| 2. Change PIN: By User ID | * (User ID) # (Old PIN) # (New PIN) # (Repeat New PIN) # |
| 3. Exit | * |

Delete Users

| Programming Step | Keystroke Combination |
|----------------------------------|-------------------------------------|
| 1. Enter Program Mode | * (Master Code) # |
| Delete Card User - Common | |
| 2. Delete Card - By Card | 2 (Read Card) # |
| OR | |
| 2. Delete Card - By ID number | 2 (User ID) # |
| OR | |
| 2. Delete User - By Card number | 2 (Input 8/10 digits Card number) # |
| Delete PIN User - Common | |
| 2. Delete PIN - By PIN | 2 (Input PIN) # |
| OR | |
| 2. Delete PIN - By ID number | 2 (User ID) # |
| Delete Panic User | |
| 2. Delete Panic Card User | 2 (User ID) # |
| OR | |
| 2. Delete Panic PIN User | 2 (User ID) # |
| Delete All Users | |
| Delete All User | 2 (Master Code) # |
| 3. Exit | * |

Note:

Set Relay Configuration

The relay configuration sets the behaviour of the output relay on activation.

| Programming Step | Keystroke Combination |
|-----------------------|---|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Pulse Mode | 3 (1-99) # (factory default) The relay time is 1-99 seconds. (1 is 50mS.) (Default is 5 seconds) |
| OR | |
| 2. Toggle Mode | 3 0 # Set the relay to ON/OFF Toggle mode |
| 3. Exit | * |

Set Access Mode

For Multi cards/PINs access mode, the interval time of reading cards/inputting PINs can not exceed 5 seconds, or else, the XK Series Device will exit to standby automatically.

| Programming Step | Keystroke Combination |
|----------------------------|---|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Card access | 4 0 # |
| OR | |
| 2. Card + PIN access | 4 1 # |
| OR | |
| 2. Card or PIN access | 4 2 # |
| OR | |
| 2. Multi cards/PINs access | 4 3 (2-9) # (Only after reading 2-9 cards or inputting 2-9 PINs, the door can be opened) |
| 3. Exit | * |

Set Strike-out Alarm

The strike-out alarm will engage after 10 failed entry attempts (Factory is OFF). It can be set to deny access for 10 minutes after engaging or disengage only after entering a valid card/PIN or Master code.

| Programming Step | Keystroke Combination |
|--------------------------|--|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Strike-Out Mode | 6 0 # (factory default) |
| OR | |
| 2. Strike-Out ON | 6 1 # Access will be denied for 10 minutes |
| OR | |
| 2. Strike-Out ON (Alarm) | 6 2 # |
| Set alarm time | 5 (0-3) # (factory default is 1 minute) Enter Master code # or valid user card / PIN to silence |
| 3. Exit | * |

Set Audible and Visual Response

| Programming Step | Keystroke Combination |
|---------------------------|---|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Control Sounds | OFF = 7 0 # ON = 7 1 # |
| OR | |
| 2. Control LED | OFF = 7 4 # ON = 7 5 # |
| OR | |
| 2. Control Keypad Backlit | OFF = 7 6 # ON = 7 7 # (Factory defaults are ON) |
| 3. Exit | * |

Set Card Reading Type (This step can only be applied to HID & EM version)

| Programming Step | Keystroke Combination |
|-----------------------|-------------------------|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Read HID & EM card | 9 3 # (factory default) |
| OR | |
| 2. Read EM card ONLY | 9 4 # |
| OR | |
| 2. Read HID card ONLY | 9 5 # |
| 3. Exit | * |

Master Cards Usage

| | |
|----------------------|--|
| Add a User | 1. (Read Master Add Card) 2. (Read User Card) Repeat Step 2 for additional user cards 3. (Read Master Add Card) |
| Delete a User | 1. (Read Master Delete Card) 2. (Read User Card) Repeat Step 2 for additional user cards 3. (Read Master Delete Card) |


Users Operation & Reset to Factory Default

- > **Open the door:** Read valid user card or inputting valid user PIN
 - > **Remove Alarm:** Read valid user card or inputting valid user PIN, or input Master Code #
 - > **To reset to factory default & Add Master Cards:** Power off, press the Exit Button, hold it and power on, there will be two beeps, and the LED light turns into yellow, release the exit button, then read any two 125KHz EM cards or HID cards, the LED will turn into red, means reset to factory default successfully. Of the two cards reading, the 1st one is Master Add Card, the 2nd one is the Master Delete Card.
- Remarks:**
- If no Master Cards added, must press the Exit Button for at least 10 seconds before release.
 - Reset to factory default, the user's information is still retained.

CONTROLLER MODE

The XK Series Device can work as Controller, connected with the external Wiegand reader. (Factory default mode)---7 2 #

Connection Diagram

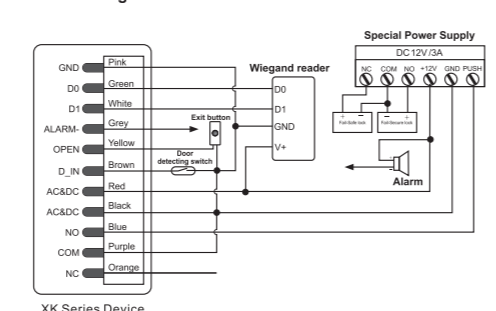

Attention: Install a 1N4004 or equivalent diode is needed when use a common power supply, or the reader might be damaged. (1N4004 is included in the packing)

Set Wiegand Input Formats

Please set the Wiegand input formats according to the Wiegand output format of the external Reader.

| Programming Step | Keystroke Combination |
|-----------------------|--|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Wiegand input bits | 8 (26-37) # (factory default is 26 bits) |
| 3. Exit | * |

Programming

- > **Basic Programming is the same as Standalone Mode**
- > **There are some exceptions for your attention:**
- > **The XK Series Device connected with External Card Reader:**
 - If EM card reader or HID card reader: users can be added/deleted on either the XK Series Device or external reader.
 - If Mifare reader: users can only be added/deleted on external reader.

The XK Series Device connected with Fingerprint Reader:

For example: Connect F2 as the fingerprint reader to the XK Series Device, it is of two steps to enroll the valid fingerprint. Step 1: Add the Fingerprint (A) on F2 Step 2: Add the same Fingerprint(A) on the XK Series Device:

| | |
|---|--|
| 1 | Enter Program Mode: * (Master Code) # |
| 2 | or |
| 2 | 1 (Press Fingerprint A) once on F2) # (ID auto allocated) |
| 2 | 1 (User ID) # (Press Fingerprint A on F2) # (Select specific ID) |
| 3 | Exit: * |

The XK Series Device connected with Keypad Reader:

The keypad reader can be 4 Bits, 8 Bits (ASCII), or 10 Bits output format. Choose the below operation according to the PIN output format of your reader.

| Programming Step | Keystroke Combination |
|-----------------------|--|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Wiegand input bits | 8 (4 or 8 or 10) # (factory default is 4 bits) |
| 3. Exit | * |

Remarks: 4 means 4 bits, 8 means 8 bits, 10 means 10 digits virtual number.

> Add PIN Users:

To add PIN users, after enter into programming mode on the XK Series Device, PIN(s) can be input/ added on either the XK Series Device controller or the external Keypad Reader.

> Delete PIN Users: the same way as add users.


WIEGAND READER MODE

The XK Series Device can work as Standard Wiegand Reader, connected to the third party Controller---7 3 #

Notes:

- The EM version reads EM card only, while the HID & EM version can be set to read HID & EM cards, or HID card only, or EM card only. Factory default card type of the HID & EM version is HID & EM cards, if you want to change the type, please set the XK Series Device to Standalone Mode (7 2 #) and then set the type. (See page 11 for setting card type).

Connection Diagram

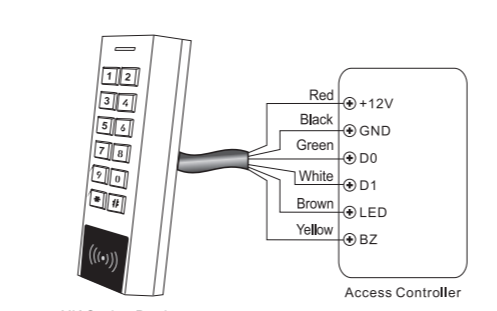

Notes:

- > When set into Wiegand Reader mode, nearly all settings in Controller Model will become invalid. And Brown & Yellow wires will be redefined as below:
 - Brown wire: Green LED light control
 - Yellow wire: Buzzer control
- > If you need to connect Brown/Yellow wires: When the input voltage for LED is low, the LED will turn into Green; and when the input voltage for Buzzer is low, it will sound.

Set Wiegand Output Formats

Please set the Wiegand output formats of Reader according to the Wiegand input formats of the Controller.

| Programming Step | Keystroke Combination |
|------------------------|--|
| 1. Enter Program Mode | * (Master Code) # |
| 2. Wiegand output bits | 8 (26-37) # (factory default is 26 bits) |
| 2. Wiegand input bits | 8 (4 or 8 or 10) # (factory default is 4 bits) |
| 3. Exit | * |

ADVANCED APPLICATION